Circuit Breaker Analyzer System



技术咨询和询价:010-68940148



- Stand-alone functionality one toolbox for all breaker testing
- Expandable modular concept
- Safer testing DualGround[™], test circuit breakers with both sides grounded
- Designed for off-line and on-line measurement
- Rugged and reliable for field use

康高特-MEGGER TM1800断路器分析仪 DESCRIPTION

The TM1800™ is the instrument platform for circuit breaker maintenance, based on decades of experience and thousands of delivered breaker analyzers. The modular construction makes it possible to configure the TM1800 for measurements on all known types of circuit breakers in operation on the world market.

The robust design contains powerful technology that streamlines circuit breaker testing. Sophisticated measurement modules enable great time savings as many parameters can be measured simultaneously, eliminating the need for new setup each time.

The patented DualGround™ testing using the DCM module makes the testing safe and time saving by keeping the circuit breaker grounded on both sides throughout the test. The DCM module uses a measuring technology called Dynamic Capacitive Measurement.

Timing M/R is using the patented Active Interference Suppression to obtain correct timing and accurate PIR (Pre-Insertion Resistor) values in high voltage substations.

An adaptive, easy-to-use software suite supports activities from timing, simply turning a knob without the need for presetting, to advanced help functions for hooking up to the test object. A keyboard and 8" screen is the front end of the high-level user interface. The Select-Connect-Inspect workflow guides you to fast results in three steps. Testing is made easier to learn and perform.

The system also offers full connection capability to the local network, printers etc.

康高特-MEGGER TM1800断路器分析仪TESTING WITH DUALGROUND

Electricity deregulation changes the business environment for utilities, switchgear owners and service companies. Deregulation has been shown to lead directly to increased emphasis on efficiency of operations, maintenance and service levels. Internationalization of business brings new challenges: substantial investments by global corporations will bring with them sharper or new requirements for increased emphasis on health, safety and environmental compliance. Experience has also shown demands for shorter time periods for testing, while the switchgear is less and less available to be taken out of service.

The safety aspect

Network operators and service companies need to maintain and develop their industry safety record. Eminent International bodies including the IEEE® and IEC®, National Safety agencies and Trade Unions increases the demands on safety. During the deregulation applicable safety regulations have been clarified and the application of existing rules has tightened. Keeping a good safety record is becoming a crucial asset in attracting investors and customers.

In all substations the capacitive coupling from live high voltage conductors induce harmful/lethal currents in all parallel conductors. Grounding both sides of the test object will lead the induced current to earth and provide a safe area for the test personnel. See figures on next page.

Circuit Breaker Analyzer System


Megger.

Both sides grounded


The best way to provide safety in circuit breaker testing is to keep both sides of the circuit breaker grounded throughout the test. This will also make the test faster and easier. Minimum time shall be spent in the substation and focus shall be on the test rather than the equipment.

The DualGround™ testing method is available for all tests on all circuit breakers.

Conventional vs. DualGround		
Site preparation (isolate work area, apply safety ground, issue permit to work)	Site preparation (isolate work area, apply safety ground, issue permit to work)	
Hook up test equipment. Issue sanction for test	Hook up test equipment. Issue sanction for test	
Authorised person removes the ground	Risky step left out	
Perform testing	Safe testing with both sides grounded	
Authorised person applies ground	Risky step left out	
Cancel sanction for test. Disconnect test equipment	Cancel sanction for test. Disconnect test equipment	
Site closing (cancel permit to work, disconnect ground)	Site closing (cancel permit to work, disconnect ground)	

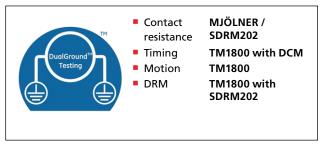

Equipment and methods that support DualGround™ testing are associated with the DualGround symbol. This symbol certifies the use of ground-breaking technology and methods that enable a safe, fast and easy workflow with both sides grounded throughout the test.

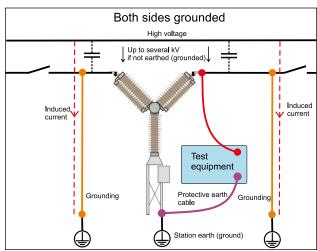

Testing is much safer using the DCM module and DualGround.

BASIC UNIT

The modularized design makes it very flexible to user needs and enables reconfiguration for new demands and upgrade with new functionality. You can configure TM1800 to a complete test set tailor made for your specific needs. The software, CABA Local, guides you to efficient circuit breaker testing. All inputs and outputs on the TM1800 and the modules are designed to withstand the harsh environment in high-voltage substations and industrial environments.


With built-in protection circuits and software-designed protection the TM1800 has a good guard to influences and even failures caused by over-voltages generated in the environment.

The HDD module is a part of the basic unit and contains the hard drive with all data and software setup. It can easily be removed and changed.

- Eight user configurable slots for modules
- Temperature sensor connection
- Trig inputs and outputs
- Outputs for warning signal and DRM
- Earth (Ground) connection
- Communication interfaces (USB, Ethernet, etc)



The basic unit is only equipped with the HDD module. Add modules to the configuration that supports your needs.

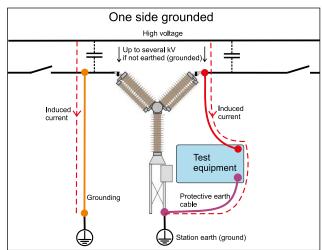

With only one side grounded the induced current can reach values high enough to be harmful or lethal for humans.

Circuit Breaker Analyzer System

CONTROL MODULE

Generates the selected circuit breaker operation sequences accurate and bounce-less. The Control module, with 9 analog channels (3 U + 6 I), also measures important parameters during the test. Coil current, ,control voltage, coil resistance and auxiliary contact timing are automatically measured for each phase without any additional test lead connections.

- Three independent contact functions per module
- Pre-programmed sequences C, O, C–O, O–C, O–C–O
- Timing of a and b auxiliary contacts
- Coil current, voltage and resistance

Including

1 cable set, 5 m (16 ft)

Optional accessories

Standard cable sets are used as extension cables: GA-90002



Megger

TIMING M/R MODULE

The Timing M/R module uses one hook-up for testing all the important timing parameters of a contact without the need of reconnection or special set-ups. One timing M/R module, with 12 analog channels (6 U + 6 I), will time up to six main plus six PIR contacts and measure values of the Pre-Insertion Resistors. With the same hook-up Timing M/R can also perform static and dynamic resistance measurements (using SDRM202). The Timing M/R module is using patented Active Interference Suppression to obtain correct timing and accurate PIR values regardless of interference in high voltage substations. The channels are also used for voltage measurement during SRM and DRM test.

- Six inputs per module
- High resolution 15 μV and up to 40 kHz sampling
- Main and parallel resistor contact timing
- Resistance value of parallel resistors

Including

3 cable sets, 5 m (16 ft) total length, adjustable spread

Optional accessories

Extension cable, 10 m (33 ft): GA-00851



DCM MODULE

The DCM module enables DualGround testing. This increases safety and also makes testing easier. Each pair of a Timing M/R and DCM module provides up to six channels. Each channel requires a special DCM cable with integrated electronics. The TM1800 system can be equipped with multiple DCM and Timing M/R module pairs that enable timing measurement on up to 18 contacts.

- Six channels per module
- Timing test using DualGround
- Safe, fast and easy testing
- Two breaks per phase
- GIS breaker testing

Including

DCM-cables, 10 m (33 ft)

Optional accessories

3-channel addition: CG-19180 Extension cables, 10 m (33 ft): GA-00999

See Optional accessories pages for more details.



ANALOG MODULE

The Analog module measures any analog entity from a transducer mounted on a circuit breaker. It enables measurements of motion, speed, current, voltage, pressure, etc. A motion measurement of a circuit breaker is simple thanks to the flexible and easy to use interface. Universal transducers, specialized transducers and conversion tables are available for several circuit breakers. See the accessory section.

- Three channels per module
- Supports industrial analog transducers
- Insulated channels, measure up to 250 V whithout volt. div.
- High resolution 0.3 mV, sampling rate 40 kHz

Including

3 cable sets, 10 m (33 ft)

Optional accessories

Extension cables, 10 m (33 ft): GA-01005 Transducers (analog) Current sensor

See Optional accessories pages for more details.



Megger.

Circuit Breaker Analyzer System

DIGITAL MODULE

With digital transducers motion and other measurements become even more accurate, faster and easier. The Digital module enables use of incremental rotary or linear transducers, for measuring e.g. motion, velocity and damping characteristics of circuit breakers.

- Six channels per module
- Incremental transducers with RS422 connection
- Up to ±32000 pulses resolution
- Up to 20 kHz sampling

Optional accessories

Transducers Extension cable, 10 m (33 ft), GA-00888

See Accessories pages for more details.



TIMING AUX MODULE

Expands the TM1800 system with timing inputs for measuring any auxiliary contact on the circuit breaker. It measures timing, polarity insensitive, of both dry and wet contacts for example timing of spring charging motor, anti-pump relay etc.

- Six channels per module
- Polarity insensitive
- Dry and wet auxiliary contacts

Including

3 cable sets, 5 m (16 ft)

Optional accessories

Standard cable sets are used as extension cables: GA-00870



HDD MODULE

The HDD module is a part of the Basic unit. Storage of all set-up, user customization and measurement data is done in the HDD module. The module is easily replaced e.g. when different users are sharing one TM1800 and want individual setups, data and configurations.

- Change set-up, user customization, measurement data by changing HDD module
- Easy to remove during transportation



Circuit Breaker Analyzer System

Megger.

APPLICATION

Timing measurements

Simultaneous measurements within a single phase are important in situations where a number of contacts are connected in series. Here, the breaker becomes a voltage divider when it opens a circuit. If the time differences are too great, the voltage becomes too high across one contact, and the tolerance for most types of breakers is less than 2 ms

The time tolerance for simultaneous measurements between phases is greater for a 3-phase power transmission system running at 50 Hz since there is always 3.33 ms between zero-crossovers. Still, the time tolerance is usually specified as less than 2 ms, even for such systems. It should also be noted that breakers that perform synchronized breaking must meet more stringent requirements in both of the previously stated situations.

There are no generalized time limits for the time relationships between main and auxiliary contacts, but it is still important to understand and check their operation. The purpose of an auxiliary contact is to close and open a circuit. Such a circuit might enable a closing coil when a breaker is about to perform a closing operation and then open the circuit immediately after the operation starts, thereby preventing coil burnout.


The "a" contact must close well in advance of the closing of the main contact. The "b" contact must open when the operating mechanism has released its stored energy in order to close the breaker. The breaker manufacturer will be able to provide detailed information about this cycle.

Motion measurements

A high-voltage breaker is designed to interrupt a specific short-circuit current, and this requires operation at a given speed in order to build up an adequate cooling stream of air, oil or gas (depending on the type of breaker). This stream cools the electric arc sufficiently to interrupt the current at the next zero-crossover. It is important to interrupt the current in such a way that the arc will not re-strike before the breaker contact has entered the so-called damping zone.

Speed is calculated between two points on the motion curve. The upper point is defined as a distance in length, degrees or percentage of movement from a) the breaker's closed position, or b) the contact-closure or contact-separation point. The time that elapses between these two points ranges from 10 to 20 ms, which corresponds to 1-2 zero-crossovers.

The distance throughout which the breaker's electric arc must be extinguished is usually called the arcing zone. From the motion curve,

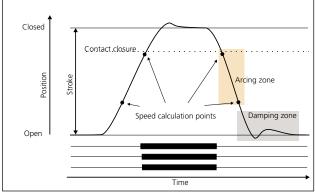

Motion diagram and timing graphs for a close-open operation

a velocity or acceleration curve can be calculated in order to reveal even marginal changes that may have taken place in the breaker mechanics.


Damping is an important parameter for the high energy operating mechanisms used to open and close a circuit breaker. If the damping device does not function satisfactorily, the powerful mechanical strains that develop can shorten breaker service life and/or cause serious damage. The damping of opening operations is usually measured as a second speed, but it can also be based on the time that elapses between two points just above the breaker's open position.

Coil currents

These can be measured on a routine basis to detect potential mechanical and/or electrical problems in actuating coils well in advance of their emergence as actual faults. The coil's maximum current (if current is permitted to reach its highest value) is a direct function of the coil's resistance and actuating voltage. This test indicates whether or not a winding has been short-circuited.

When you apply a voltage across a coil, the current curve first shows a straight transition whose rate of rise depends on the coil's electrical characteristic and the supply voltage (points 1-2). When the coil armature (which actuates the latch on the operating mechanism's energy package) starts to move, the electrical relationship changes and the coil current drops (points 3-5). When the armature hits its mechanical end position, the coil current rises to the current proportional to the coil voltage (points 5-7). The auxiliary contact then opens the circuit and the coil current drops to zero with a current decay caused by the inductance in the circuit (points 7-8).

The peak value, of the first lower current peak, is related to the fully saturated coil current (max current), and this relationship gives an indication of the spread to the lowest tripping voltage. If the coil was to reach its maximum current before the armature and latch start to move, the breaker would not be tripped. It is important to note, however, that the relationship between the two current peaks varies, particularly with temperature. This also applies to the lowest tripping voltage.

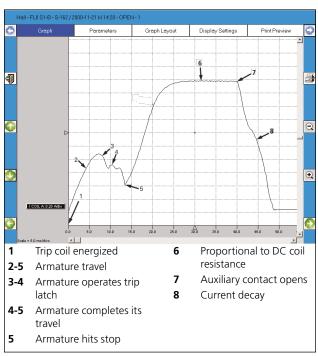

Example of coil current on circuit breaker




Circuit Breaker Analyzer System

Dynamic resistance measurement (DRM)

A circuit breaker will have arcing contact wear by normal operation as well as when breaking short-circuit currents. If the arcing contact is too short or otherwise in bad condition, then the breaker soon becomes unreliable. Main contact surfaces can be deteriorated by arching, resulting in increased resistance, excessive heating and in worst-case explosion.

The main contact resistance is measured dynamically over an open or close operation in DRM. With DRM measurement the arcing contact length can be reliably estimated. The only real alternative in finding the length of the arcing contact is dismantling the circuit breaker.

A reliable DRM interpretation requires high test current and a circuit breaker analyzer with good measurement resolution.

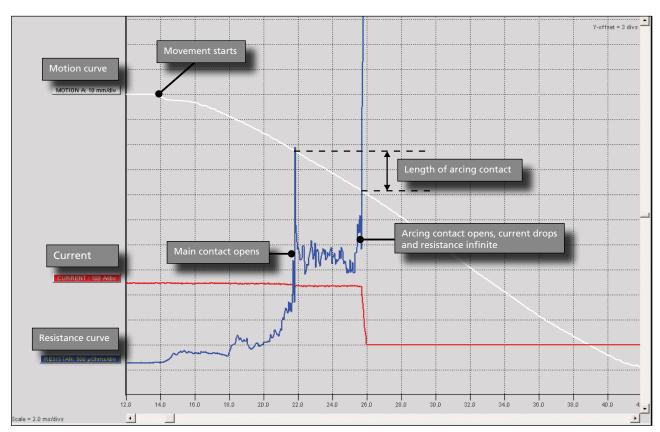

DRM is a reliable method to estimate the length/wear of the arcing contact. The SDRM202 provides high current and the TM1800 gives an accurate measurement with very good resolution. Besides, it is possible to use DualGround testing.

Circuit Breaker Analyzer System



Working with TM1800 means fast and easy testing. Testing is done with a three-step process.

First step is to select a suitable template from the template library depending on number of contacts per phase, motion or not, resistor contacts and more.

Second step is to connect the test leads according to the graphical help screen.


Third step is to turn the "Measure" knob. The measurement is performed, analyzed and the results will be displayed on the screen. Magnification and compare functions are available.

For more advanced setup there is still the opportunity to control all the details in the measurement. The large number of general purpose templates cover most circuit breakers found around the world. It is also possible to select a tailor made template with special adaptations. You can edit templates yourself or with assistance from our customer support. This is a very powerful tool to customize TM1800 for fast and easy work according to your needs in every detail. Increase the level of detail as you learn.

After the test it is possible to print a test report, from CABA Win on a PC. With CABA Win you can make a more advanced analysis of the data. See separate data sheet for CABA Win.


Select

Select the template suitable for the test and circuit breaker from the library.

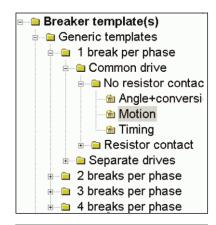


Connect

Connect test leads and cables according to display. Separate help screen per cable.

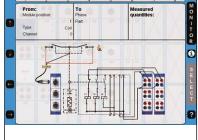

Inspect

Turn the knob and the measurement is displayed on the screen ready for inspection.

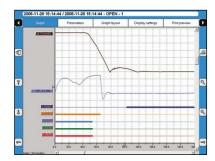

APPLICATION EXAMPLES

6 Timing and 3 Motion

Circuit breaker	Any CB with two contacts per phase and separate drives	
TM1800 configuration	TM1800 Expert	

Megge

- Select breaker template: Generic templates / 2 breaks per phase / Separate drives / Two Control modules / No resistor contact / Motion
- 2 Connect cables according to "Analyzer view" in CABA Local. Turn the OPERATE/MEASURE knob.
- **3 Inspect** the result on screen.

Note:

Coil current and auxiliary contacts are measured and displayed automatically.

If TM1800 is configured with a DCM module the test can be made using DualGround.

Circuit Breaker Analyzer System

Megger.

SPECIFICATIONS TM1800

General

Specifications are valid after 30 minutes warm up time.

System time base drift 0.001% per year.

Specifications are subject to change without notice.

Environment

Application field For use in high-voltage substations and

industrial environments

Temperature

Operating -20°C to $+50^{\circ}\text{C}$ (-4°F to $+122^{\circ}\text{F}$)
Storage & transport -55°C to $+70^{\circ}\text{C}$ (-67°F to $+158^{\circ}\text{F}$)
Humidity 5% - 95% RH, non-condensing

CE-marking

EMC 2004/108/EC *LVD* 2006/95/EC

Basic unit

General

Mains input (nominal) 100 – 240 V AC, 50/60 Hz

125 – 300 V DC

Power consumption 250 VA (max)

Dimensions 515 x 173 x 452 mm (20.3" x 6.8" x 17.8")

Weight 11.5 kg (25.4 lbs)

HDD module

Weight 0.6 kg (1.3 lbs)

Temperature, storage -55°C to +70°C (-67°F to +158°F)

External input

TRIG IN

Voltage mode

Input range $0-250 \text{ V AC}, 0-\pm 300 \text{ V DC}$

Threshold level User configurable in software in steps of

1 V

Contact mode

Open circuit voltage 35 V DC $\pm 20\%$ Short circuit current 10 – 40 mA Threshold level 1 – 2 k Ω

External outputs

TRIG OUT

Pulse duration 1 – 999 ms, user configurable in steps of

1 ms

Voltage mode

Open circuit voltage $12 \text{ V DC } \pm 5\%$ Voltage at 0.5 A $9 \text{ V DC } \pm 10\%$ Max. short circuit1.5 A

current
Contact mode

Max. switching current 0.5 A at 12 V and resistive load

Voltage drop at 0.5 A 4.5 V DC $\pm 10\%$ Max. short circuit 1.5 A

current **DRM**

Only for triggering SDRM201 / SDRM202

WARNING

Relay For lamp or horn

Pre-operation warning 0 – 999 s, user configurable in steps of 1 s

Voltage mode

Output Voltage 12 V DC ±10%

Short circuit protection Fuse 1 A DC fast acting type (F1H250V)

Contact mode

Max. switching currrent 1 A at 12 V and resistive load

Communication interfaces

USB Universal Serial Bus ver. 2.0 Ethernet 100 base-Tx Fast Ethernet

External screen SVGA, up to 800 x 600 at 24 bit color,

32 MB SDRAM

HMI, Human-Machine interface

CABA Local Circuit breaker analyzing software

Available languages English, French, German, Spanish, Swed-

ish. Translation kit available

Display Super-Bright for good visibility in direct

sunlight

Diagonal size 21 cm (8") Keyboard Built-in

Modules

Control module

General

No. of channels 3

Time base inaccuracy $\pm 0.01\%$ of reading ± 1 sample interval

Max. sample rate 10 kHz

Measurement time 45 s at 10 kHz sample rate,

90 s at 5 kHz sample rate,

200 s at 10 kHz sample rate using data

compression

Weight 1.0 kg (2.2 lbs)

Non-bouncing switch

Max current 60 A AC/DC, pulse ≤ 100 ms

Fuse 15 A DC

Duration User configurable in steps of 1 ms
Delay User configurable in steps of 1 ms

Current measurement

Measurement range 0 – 60 A AC/DC

Resolution 16 bits (15 bits at data compression)
Inaccuracy ±2% of reading ±0.1% of range

Voltage measurement

Measurement range $0-250 \text{ V AC}, 0-\pm 300 \text{ V DC}$ Resolution20 mV (40 mV at data compression)Inaccuracy $\pm 1\% \text{ of reading } \pm 0.1\% \text{ of range}$

Timing M/R module

General

No. of channels 6

Time base inaccuracy ±0.01% of reading ±1 sample interval

Min. resolution 0.05 ms Max. sample rate 40 kHz

Measurement time 8 s at 40 kHz sample rate,

32 s at 10 kHz sample rate,

200 s at 10 kHz sample rate using data

compression

Data compression is available at sample

rates up to 20 kHz

Weight 0.8 kg (1.8 lbs)
Timing of main and resistive contacts

Open circuit voltage

oltage 6 V or 26 V ±10% (Toggling at every sec-

ond sample at sample rates from 10 kHz

and upwards.)

Short cicuit current 9.7 mA or 42 mA ±10%

Status threshold

8

Circuit Breaker Analyzer System

Megger.

Main Closed $< 10 \Omega < Open$

Main and Resistor Main $< 10 \Omega < PIR < 10 k\Omega < Open$

PIR resistance measurement

Supported PIR types Linear PIR Measurement range $10 \Omega - 10 k\Omega$

Inaccuracy ±10% of reading ±0.1% of range

Voltage measurement

Measurement ranges ±50 Vpeak, ±15 Vpeak, ±0.5 Vpeak

Resolution 16 bits

Inaccuracy ±1% of reading ±0.1% of range

DCM module

General

No. of channels 6

Weight 0.6 kg (1.3 lbs)

Output

Voltage 0 - 5 V rms AC

Current 0 - 70 mA rms AC

Analog module

General

No. of channels

Time base inaccuracy $\pm 0.01\%$ of reading ± 1 sample interval

Max. sample rate 40 kHz

Measurement time 35 s at 40 kHz sample rate,

70 s at 20 kHz sample rate,

200 s at 10 kHz sample rate using data

compression

Transducer resistance $500 \Omega - 10 k\Omega$ at 10 V output

Weight 0.8 kg (1.8 lbs)

Output

Voltage output 10 V DC ±5%, 24 V DC ±5%

Max. output current 30 mA

Current measurement

Measurement range 0 – 20 mA DC

Resolution 16 bits (15 bits at data compression)
Inaccuracy ±1% of reading ±0.1% of range

Voltage measurement

Input voltage range $0-250 \text{ V AC}, 0-\pm 300 \text{ V DC}$

Measurement ranges $\pm 10 \text{ V}, \pm 400 \text{ V}$

Resolution 16 bits (15 bits at data compression)

Inaccuracy

250 V range $\pm 1\%$ of reading $\pm 0.1\%$ of range $\pm 0.1\%$ of reading $\pm 0.01\%$ of range

Digital module

General

No. of channels 6

 $\begin{tabular}{ll} Supported types & Incremental transducers, RS422 \\ \hline {\it Time base inaccuracy} & \pm 0.01\% \ of \ reading \pm 1 \ sample \ interval \\ \hline \end{tabular}$

Max. sample rate 20 kHz

Measurement time 35 s at 20 kHz sample rate,

70 s at 10 kHz sample rate,

200 s at 10 kHz sample rate using data

compression

Weight 0.7 kg (1.5 lbs)

Output

Voltage 5 V DC ±5% or 12 V DC ±5%

Max. output current 200 mA

Digital input

Range ±32000 pulses

Resolution 1 pulse Inaccuracy ±1 pulse

Timing Aux module

General

No. of channels 6

Time base inaccuracy ±0.01% of reading ±1 sample interval

Max. sample rate 20 kH

Measurement time 35 s at 20 kHz sample rate,

70 s at 10 kHz sample rate,

200 s at 10 kHz sample rate using data

compression

Weight 0.8 kg (1.8 lbs)

Voltage mode

Input voltage range $0 - 250 \text{ V AC}, 0 - \pm 300 \text{ V DC}$

Status threshold $\pm 10 \text{ V}$ Inaccuracy $\pm 0.5 \text{ V}$

Contact mode

Open circuit voltage 25 – 35 V Short circuit current 10 – 30 mA

Status threshold Closed < 100 Ω , Open > 2 k Ω





Circuit Breaker Analyzer System

OPTIONAL ACCESSORIES

Item	Description	Cat. No.	
Software and	application accessories		
CABA Win – Circ	uit Breaker analysis software	•	
CABA Win	incl. Ethernet cross-over cable	CG-8000X	
CABA Win upgrade	Upgrade to latest version	CG-8010X	
Synchronized Sv	vitching Relay test kit		
SSR kit	Incl. accessories, software and cables (delivered in transport case)	CG-91200	
Static and Dyn	amic Resistance Measure	ment	
SDRM202	The SDRM202 uses new technology, patent pending, with ultra capacitors. The current output is up to 220 A from a box that weighs only 1.8 kg (4 lbs). The weight of the current cables is also low because the SDRM202 is placed very close to the circuit breaker. Timing M/R measurement can be done with the same	55,0000	
SDRM202 Pack of	hook-up Pack for CB with 2 Breaks / Phase	CG-90200	
3 units	Tack for CD With 2 breaks / Thase	CG-90230	
Extension cable SDRM202	10 m (33 ft)	GA-12812	
Transducers			
Linear - Analog			
TLH 500	500 mm (20") travel Incl. cable 0.5 m (20")	XB-30020	
LWG 225	225 mm (9") travel Incl. cable 0.5 m (20")	XB-30117	
TS 150	150 mm (5.9") travel Incl. cable 1.0 m (39")	XB-30030	
TS 25	25 mm (1") travel Incl. cable 1.0 m (39")	XB-30033	
The above transducers are also available in other lengths, please contact Megger for information. Rotary - Analog			
Novotechnik IP6501	Incl. cable 1 m (39"), 6 mm Flex coupling, Hexagon wrench	XB-31010	
Flex coupling	For IP6501, shaft diam. 6 mm	XB-39030	
Rotary - Digital			
Baumer	EIL Incl. cable 10 m (33ft), 10/6 mm Flex coupling, Hexagon wrench	XB-39130	
Flex coupling	Shaft diam. 10/6 mm	XB-39032	
Transducer mounting kits			
Universal kits <i>Rotary transduc-</i>	For transducers XB-31010 and		
er mounting kit	XB-39130	XB-51010	
Universal trans- ducer mounting kit	For linear and rotary transducers	XB-51020	
Circuit breaker	specific kits	57020	
LTB Kit (ABB)	Incl. mounting kit XB-51010, Soft-	XR-61010	

ware conversion table BL-8730X XB-61010

Item	Description	Cat. No.
HPL/BLG Kit (ABB)	Incl. mounting kit XB-51010, Software conversion table BL-8720X	XB-61020
Ready-to-use kit	s – Rotary – Analog	
1-phase kit	Incl. transducer XB-31010, mounting kit XB-51010	XB-71010
3-phase kit	Incl. 3 x 1-phase kits XB-71010	XB-71013
Ready-to-use kit	s – Rotary – Digital	
1-phase kit	Incl. transducer XB-39130,	
	mounting kit XB-51010	XB-71020
3-phase kit	Incl. 3 x 1-phase kits XB-71020	XB-71023
	nting accessories	
Universal sup- port		XB-39029
Switch magnetic base		XB-39013
Thread adapter kit	Imperial / metrics adapter kit for TLH	XB-39036
Cables		
TM1800 DCM 3-channel addi- tion	3 DCM cables, 10 m (33 ft), 6 Clamps	CG-19180
TM1800 DCM	3 DCM extension cables, 10 m	CG-13100
3-channel exten-	(33 ft) GA-00999	
sion cable		CG-19181
DCM extension cable	BNC male to BNC female, 2 m (6.5 ft)	GA-00720
Cable reel	Black	GA-00840
20 m (65.5 ft), 4 mm stackable	Red	GA-00842
safety plugs	Yellow	GA-00844
	Green	GA-00845
	Blue	GA-00846
Extension cables,	For analog input, 10 m (32.8 ft)	GA-01005
XLR female to male	For Timing M/R modules, 10 m (32.8 ft)	GA-00851
Open analog cable	For customized analog transducer connection	GA-01000
XLR to 4 mm safety plugs	For customized analog transducer connection	GA-00040
Digital trans-	RS422, 10 m (33 ft)	
ducer extension cable		GA-00888
Open digital cable	For customized digital transducer connection	GA-00885
L & L digital cable	For using Leine & Linde 530 digital transducer	GA-00890
Doble cable	Adapter for Doble transducer	GA-00867
Siemens cable	Adapter for Siemens transducer	GA-00868
Vanguard cable	Adapter for Vanguard transducer	GA-00869
Baumer EIL cable	Digital cable	GA-00889
Ethernet cable, network	Cable for connection to net- work/LAN	GA-00960



Circuit Breaker Analyzer System

Item	Description	Cat. No.
Current sensor	Current sensor kit 1 channel (CA E27 incl. cable GA-00140)	BL-90600
	Current sensor kit 3 channels (CA E27 incl. cables GA-00140)	BL-90610
Temperature sensor	With the temperature sensor the ambient temperature is automatically recorded with each measurement and stored together with the test result. The temperature becomes a parameter in CABA Win. The temperature sensor shall be placed in the shade. Suitable cable is the Analog cable, 10 m GA-01005. Range: -20°C to +50°C (-4°F to +122°F), Resolution: 0.5°C (0.9°F)	CG-90070
Soft case	Made from sturdy nylon fabric	GD-00340
Cable organizer	Velcro straps, 10 pcs.	AA-00100

For more information about optional accessories please contact Megger Sweden AB



Rotary transducer, Novotechnic IP6501 (analog)



Rotary transducer, Baumer EIL (digital)



Linear transducer, LWG 150



Linear transducer, TLH 225

Megger.

Circuit Breaker Analyzer System



Rotary transducer mounting kit, XB-51010



SDRM202



Cable XLR, GA-00760



Universal support



Extension cable XLR, GA-01005



Temperature sensor



Cable reels, 20 m (65.5 ft), 4 mm stack-able safety plugs



Switch magnetic base



Soft case

Megger

Circuit Breaker Analyzer System

TM1800 - CONFIGURATIONS

Art. No.

TM1800 Basic Unit **CB** testing example ordered separately.

No testing is possible. Modules has to be

CG-19090

CG-19290



TM1800 Standard **CB** testing example

One common operating mechanism

- 1-2 breaks per phase
- 1-3 travel motion



TM1800 Standard – for DualGround **CB** testing example

CG-19292

- With both sides grounded
 - One common operating mechanism
 - ► 1-2 breaks per phase
 - ▶ 1-3 travel motion





DCM-cables x 6

TM1800 Expert **CB** testing example


- 3 operating mechanisms
- 6 auxiliary, 6 coil currents, 6 station battery voltages
- 4 breaks per phase
- 3 travel motions
- 6 independent auxiliary contacts



TM1800 Expert – for DualGround CB testing example

CG-19296

CG-19294

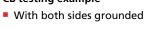

- ▶ 3 operating mechanisms
- ▶ 6 auxiliary, 6 coil currents, 6 station battery voltages
- ▶ 4 breaks per phase
- ▶ 3 travel motions
- ▶ 6 independent auxiliary contacts





DCM-cables x 12

	ORDERING I	NFORMAT	ION
Item	Part. No.	Item	
TM1800 - Separate items		TM1800 St	andar
TM1800 Basic Unit Complete with: HDD module, CABA Local, Tran port case, USB Memory	ns- CG-19090	<i>Including:</i> CG-19090 CG-19030	TM18 TM18
Control Module (3 independent contacts) Including: 1 cable set, 5 m (16 ft), GA-90002	CG-19030	CG-19080 CG-19192 CG-19000	TM18 TM18 TM18
Timing M/R Module (6 channels + 6 PIR) Including: 3 cable sets, 5 m (16 ft) total length, 2 m (6.5 ft) spread, GA-00850	CG-19080	CG-8000X TM1800 Ex Including:	cpert
DCM Module Including: 3 DCM-cables, 10 m (33 ft)	CG-19190	CG-19090 CG-19030 CG-19080 CG-19000	TM18
DCM Module Including: 6 DCM-cables, 10 m (33 ft)	CG-19192	CG-19060 CG-8000X	TM18
Analog Module (3 channels) Including: 3 cable sets, 10 m (33 ft), GA-01005	CG-19000	TM1800 Ex Including: CG-19090	cpert - TM18
Digital Module (6 channels) Timing Aux Module (6 channels) Including:	CG-19040	CG-19030 CG-19080 CG-19192	TM18 TM18 TM18
3 cable sets, 5 m, GA-00870	CG-19060	CG-19000 CG-19060	TM18

Item	Part. No.		
TM1800 Standard – for DualGround testing			
Including:			
CG-19090 TM1800 Basic Unit	1		
CG-19030 TM1800 Control Module	1		
CG-19080 TM1800 Timing M/R Mod	dule 1		
CG-19192 TM1800 DCM Module	1		
CG-19000 TM1800 Analog Module	1		
CG-8000X CABA Win - TM1800	1 CG-19292		
TM1800 Expert			
Including:			
CG-19090 TM1800 Basic Unit	1		
CG-19030 TM1800 Control Module	2		
CG-19080 TM1800 Timing M/R Mod	odule 2		
CG-19000 TM1800 Analog Module			
CG-19060 TM1800 Timing AUX Mod	odule 1		
CG-8000X CABA Win - TM1800	1 CG-19294		
TM1800 Expert – for DualGround testing			
Including:			
CG-19090 TM1800 Basic Unit	1		
CG-19030 TM1800 Control Module	2		
CG-19080 TM1800 Timing M/R Mod	dule 2		
CG-19192 TM1800 DCM Module	2		
CG-19000 TM1800 Analog Module	1		
CG-19060 TM1800 Timing AUX Mod			
CG-8000X CABA Win - TM1800	1 CG-19296		

Optional accessories

See Optional accessories pages

CABA Win

See separate datasheet for CABA Win.

TM1800 – Configurations

TM1800 Standard

Including:			
CG-19090	TM1800 Basic Unit	1	
CG-19030	TM1800 Control Module	1	
CG-19080	TM1800 Timing M/R Module	1	
CG-19000	TM1800 Analog Module	1	
CG-8000X	CABA Win - TM1800	1	CG-19290

