

BLU100V

技术咨询和询价：010-68940148

Battery Load Units

- Operating voltage range: 3,0 (0,0)* - 500 V DC
*Total discharge down to 0 V available with ZVD module
- Powerful – discharge power of up to 28,4 kW
- Discharge current – up to 240 A DC
- Lightweight – starting from 12,8 kg (28.2 lbs)
- Easily expandable for larger banks using BXL extra load units
- Discharge test of single Lead-acid, Ni-based and Li-ion cell
- Adjustable alarm and shutdown parameters for preventing excessive discharge
- Enables testing batteries while in service
- Detailed test analysis using DV-B Win software
- Test resume feature in case of interrupted power supply



BLU100V Description

Batteries are crucial part to the overall reliability of a substation. During the power outage many electric power objects/systems, such as power plants and generator excitation systems, should continue operating using batteries. Inability of a battery string to provide a sufficient voltage/power supply to protection circuits may lead to catastrophic consequences to the substation equipment. Therefore, it is necessary batteries to be inspected regularly in order to monitor their condition and maximize their life-time. The essential and most reliable test for a condition assessment of a battery health is the capacity measurement test. The best way to measure battery capacity is to perform a discharge test.

The Battery Load Units – BLU-A series are stand-alone or PC-controlled battery capacity test set, based on a state-of-the-art technology,

using the most advanced power electronics solutions with coolers and fans integrated into device.

The BLU series devices are lightweight solution for the test engineers from all around the world, developed to meet customer's wide ranging test procedures (standardized as well as customized). Using a BLU device, the capacity test is performed in an accurate, user-friendly way in accordance to actual standards for battery testing (IEEE 450-2010 / 1188-2005 / 1106-2015, IEC 60896-11/22 and other relevant standards).

Additionally, when combined with Zero Voltage Discharge Module ZVD, BLU series enables **full battery discharge down to 0 V**, required before battery recycling.

Discharging can be performed at constant current, constant power, constant resistance or

in accordance with a pre-selected load profile. The discharge test can be conducted even in case a battery remains connected to the load – by measuring and taking into account the load current during the process.

The BLU-A series devices provide the discharge current of up to 240 A and are applicable to up to 500 V battery voltages.

Values of voltage, current / power / resistance, capacity and elapsed time are displayed on touch screen display during the test. The instrument will keep the preset current / power / resistance constant during the test (no manual corrections during the test are required).

When a required discharge current or power exceeds the capacity of a single BLU device,

several BLU devices can be connected in parallel. Alternatively, External Load Units BXL series can also be used to increase discharging capacity. Combined with Battery Voltage Supervisor BVS and Battery Voltage Recorders BVR, BLU-A series devices are powerful tool which enables performing detailed evaluation of batteries. Overview of the maximum currents for various battery voltage ranges with the minimum achievable cell voltage of 1,75 V is presented in the table below. Maximum currents available by using BXL series devices are also presented in the table.

Battery voltage (V)		Maximum discharge current (A)							
		BLU-A Series + BXL Models							
Nom.	Min/max	BLU100L	BLU100A	BLU200A	BLU340A	BXL-A	BXL-T	BLU360V	BXL-V
3,7	3,0	50	-	-	-	-	-	-	-
	4,2								
6	5,25	40	40	60	50	59	62	50	11
	7,05					80	80		15
12	10,5	80	80	120	100	119	125	100	22
	14,1					160	165		30
24	21,0	160	160	240	160	186	250	160	48
	28,2					250	330		65
48	42,0	160	160	240	160	186	241	160	96
	56,4					250	320		130
60	52,5	120	120	210	160	81	189	160	122
	70,5					110	250		165
110	96,3	110	110	140	160	119	-	160	89
	129,3					160			120
120	105,0	100	100	140	150	134	-	150	96
	141,0					180			130
220	192,5	55	55	75	110	60	-	110	78
	258,5					80			105
240	210,0	50	50	70	100	65	-	100	85
	300,0					85			115
420	300,0	-	-	-	-	-	-	65	30
	410,0								41
	410,0							55	41
	500,0								50
Weight (kg / lbs)		12,8 / 28,2	12,8 / 28,2	14,5 / 32	20,6 / 45,4	12,5 / 28	12,5 / 28	20,6 / 45,4	16 / 35
Max Power (kW)		14,2	14,2	19,7	28,4	25,4	18	28,4	32,4

Application

Typical application is measuring the capacity of batteries up to 500 V DC. Additionally, BLU & ZVD system enables full discharge of the battery (down to 0 V DC).

BLU Series can be applied to batteries that can be found in (but not limited to):

- Power plants
- Telecommunication systems
- Generator excitation systems
- Substations
- Protection and control systems

Connecting BLU to Battery

Single mode


The BLU device can be connected to any battery test object by using a set of current cables and, optionally, a set of voltage sense cables. To maximize the accuracy and measurement repeatability, all clamps must have good connection to the battery terminals while any crossing between the cables should be avoided. The BLU displays an appropriate message if connection between a cable clamp and the corresponding battery terminal is not established.



Parallel discharge test mode

In case the required discharge current or power exceeds the capacity of a single BLU device, several (up to ten) devices can be connected in parallel.*


Connection between BLU devices is established by using Ethernet ports and RS485 communication. The communication is based on a MASTER-SLAVE principle – arbitrary selected device is set as MASTER while all the other BLU devices should be set as SLAVE units. In the parallel connection the MASTER will discharge as much energy as possible; the remaining energy (discharge current / discharge power) will be discharged on the first SLAVE unit in a chain. If MASTER and the first SLAVE does not have capacity to cover the discharge requirements, the remaining energy will be discharged on the next SLAVE in a chain, etc.

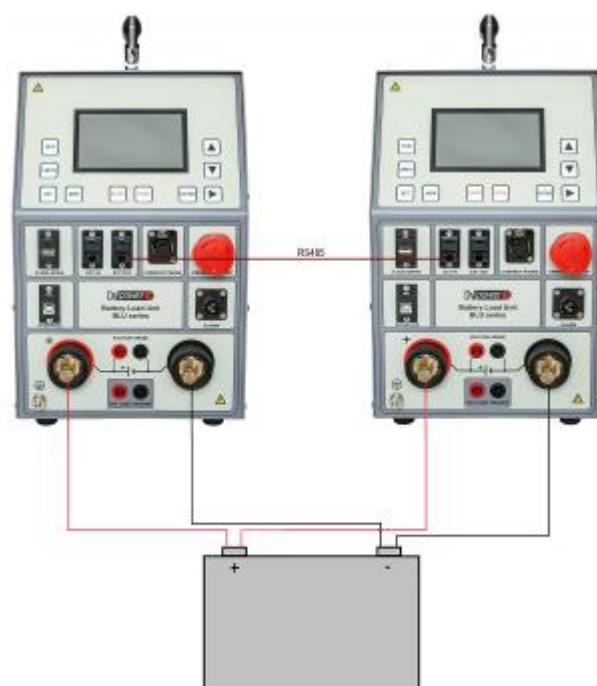


* BLU100A & BLU100L models do not support testing in parallel discharge mode.

Current Probe mode

In case the battery has to remain connected to the load, or an Extra Load BXL needs to be connected due to increase in discharge power, the discharge test needs to be carried out using the Current Probe CP MODE.

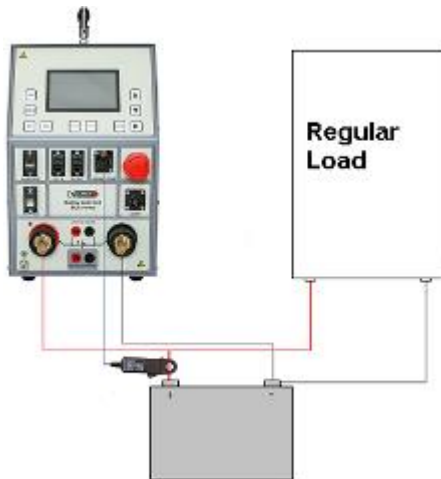

In this mode the measurement will be based either on the total battery current or a load current being measured by the DC current probe. The current probe connection point, for both modes, are illustrated in the figures below.

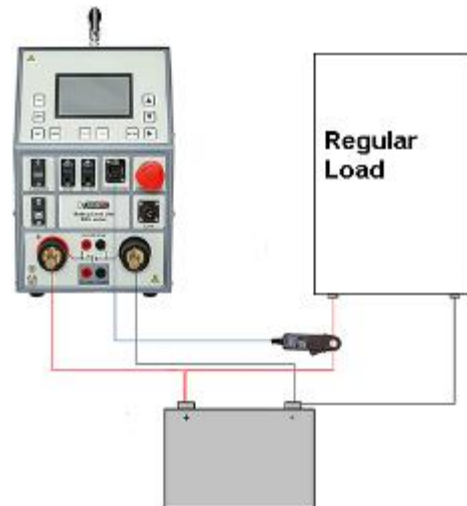

BLU + ZVD for Total Discharge (to 0 V)


Zero Voltage Discharge Module ZVD Series is specially designed external module enabling full battery discharge (down to 0 V). It is designed to operate in a system with BLU (or BLU-C) providing total discharge of batteries with voltage up to 500 V DC.

The total battery discharge is required in the battery recycling process. It is important to discharge a battery completely before entering the recycling process, because the battery can contain some remanent energy. That remanent energy can be dangerous and create problems during the disassembling of a battery or even during its transportation. In order to prevent that, we created the ZVD Series enabling a full battery discharge. A single discharge down to 0 V will not extract all the energy from the battery. Once the discharge is finished, battery voltage will rise to some non-zero value, confirming there is still energy in the battery. The phenomenon is called the battery voltage

rebound. BLU & ZVD system improves the discharge process by discharging the battery in 2 steps:

Step 1: Efficient (up to 60 A) and controlled (current is constant down till 0 V is reached) discharge until battery voltage drops to 0 V.


Step 2: ZVD short-circuits the battery to remove the remaining energy.

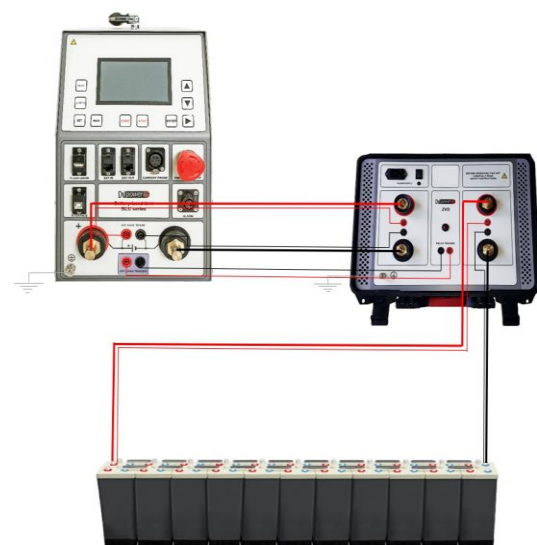

Benefits and Features

The list of the instruments application, benefits and features includes:

- Battery capacity measurement by conducting a discharge test, in compliance with corresponding IEEE, IEC and other relevant standards
- *Constant I*, *Constant P* and *Constant R* operation modes
- Several Load profile operation modes: *Load profile I*, *Load profile P* and *Load profile R*, enable simulating load characteristics variation during a discharge test
- Parallel operation feature (*not provided for BLU100L & BLU100A models*)
- Current probe mode enables conducting discharging test while a load remains connected or when BXL units or any other load units in the market are used
- Test settings can be modified during the test
- Discharge test of single Lead-acid, Li-ion cell and Ni-based cells
- Adjustable alarm and shutdown parameters for preventing excessive discharge
- Complete battery discharge (down to 0 V) when in system with Zero Voltage Discharge Module (ZVD)
- If supported by a Battery Voltage Recorder BVR Series, additional features of cell voltage and cell temperature measurement are available
- The total voltage and capacity curve, as well as numerical values are recorded in the unit's internal memory after a test. The results can easily be transferred to personal computer or laptop for storage, printout or export purposes.
- Using the DV-B Win software (on a personal computer or laptop), graphical (curves) and numerical values of current / power / resistance, capacity, voltage and elapsed time are displayed and can be observed in real-time.

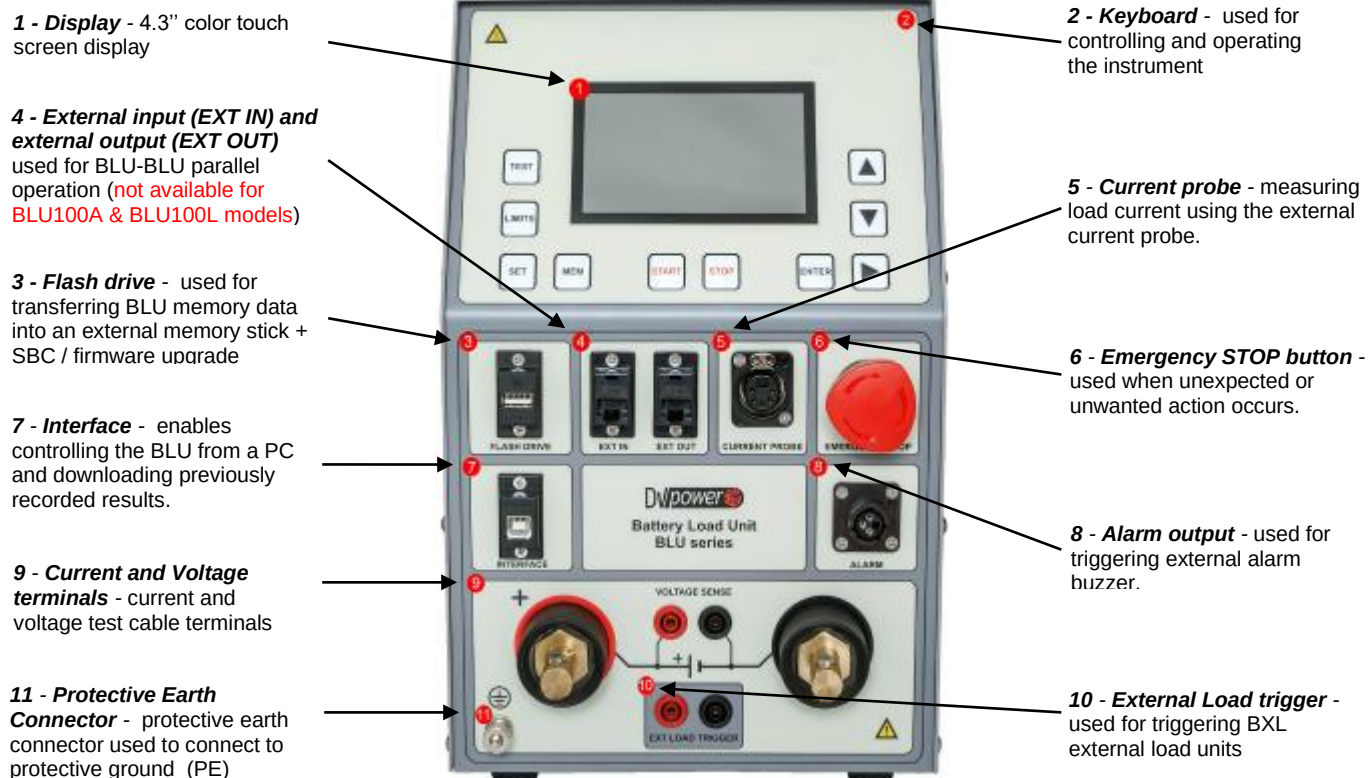

Combining BLU-A and BVR22

Battery Voltage Recorder Series BVR22 is a lightweight, user-friendly, rechargeable handheld device intended for individual battery cell voltage and temperature measurement while the battery is either in online or offline mode. When used in combination with the BLU device it serves as an efficient supplement to the battery capacity testing.

Options and features of the BVR22 model are presented in the table below.

	Parameters Measured - String and cell voltage, cell (electrolyte)/ambient temperature, DC current measurement using current clamps. - Simultaneous string voltage and DC current measurement - Bluetooth communication with external Density Meter Measurement range - String / Cell Voltage: ± 600 V DC - Current / Intercell voltage: ± 1 V DC Data Transfer: Bluetooth and USB to PC
---	--

Combining BLU-A and BVS

DV Power battery voltage supervisor – BVS, is an accurate battery voltage monitoring system that monitors the state of health of battery systems. It records important battery parameters such as battery voltage, inter-cell connection voltage, and ambient temperature. Because of that, it can be a support tool for BLU during

capacity testing. There are two types of DV Power battery voltage supervisors:


- BVS – One cell voltage module measures 1 cell
- BVS-4 – One cell voltage module measures 4 cells

Series	BVS	BVS-4
Picture		
No. of Measured Cells	One module measures one cell	One module measures four cells
Inter-cell Connection Voltage	✓	✗
Cell Temperature	YES (one temperature channel per cell)	YES (one temperature channel per 4 cells)
Ambient Temperature	✓	✓

DV-B Win Software

The DV-B Win software is included in the purchase price, and all its updates are free of charge. Using the DV-B Win software a test can be controlled, performed and observed from a PC (or notebook), and the results can be saved directly on a PC (or notebook). Communication between the BLU and a PC (or notebook) is achieved through a USB cable. Using DV-B Win the results can be arranged and printed for a report in a selectable format as an XLS, PDF,

Word, or RTF format. Also, the possibility of importing other types of data format (jpg, png, doc) into standardized DV-B Win report is provided, as well as exporting the numerical and graphical results from DV-B Win into customizable report. Additionally, the software provides a possibility of setting extra parameters (cell voltage, string voltage, capacity and time) for alarming and ending the test.

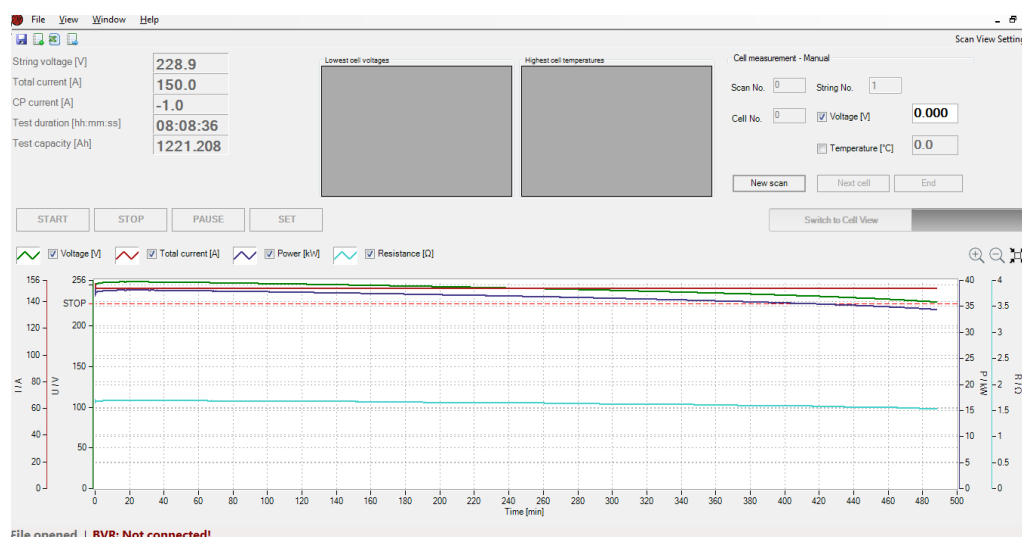

BLU-A Series - models

BLU100L

	• applicable to 3 V – 300 V DC battery voltages • weight – 12,8 kg (28.2 lbs) • discharge power – up to 14,2 kW • discharge current – up to 160 A
---	--

BLU100A

	• applicable to 5,25 V – 300 V DC battery voltages • weight – 12,8 kg (28.2 lbs) • discharge power – up to 14,2 kW • discharge current – up to 160 A
---	---

BLU200A

	• applicable to 5,25 V – 300 V DC battery voltages • weight – 14,5 kg (32 lbs) • discharge power – up to 19,7 kW • discharge current – up to 240 A
---	---

BLU340A

	• applicable to 5,25 V – 300 V DC battery voltages • weight – 20,6 kg (45.4 lbs) • discharge power – up to 28,4 kW • discharge current – up to 160 A
---	---

BLU360V

	• applicable to 5,25 V – 500 V DC battery voltages • weight – 20,6 kg (45.4 lbs) • discharge power – up to 28,4 kW • discharge current – up to 160 A
---	---

Technical Data

Mains Power Supply

- Connection according to IEC/EN60320-1; C320 90 V – 264 V AC, 50 / 60 Hz, single-phase
- Supply from battery under test* (for BLU200A): 110V – 240 V DC

* Optionally / provided on request

Dimensions and Weights

Model		Dimensions	Weight
BLU100A & BLU100L (without acc.)	Instrument	440 x 221 x 355 mm 17.3 x 8.7 x 14 in	12,8 kg 28.2 lbs.
	Transport case *	545 x 300 x 418 mm 21.1 x 11.8 x 16.5 in	6,9 kg 15.2 lbs.
	Canvas Transport case **	570 x 310 x 415 mm 22.4 x 12.2 x 16.3 in	3,6 kg 7.9 lbs.
BLU200A (without acc.)	Instrument	560 x 221 x 355 mm 22 x 8.7 x 14 in	14,5 kg 32 lbs.
	Transport case *	665 x 300 x 418 mm 26.2 x 11.8 x 16.5 in	8,5 kg 18.7 lbs.
	Canvas Transport case **	690 x 310 x 415 mm 27.2 x 12.2 x 16.3 in	3,7 kg 8.2 lbs.
BLU340A (without acc.)	Instrument	730 x 221 x 355 mm 28.7 x 8.7 x 14 in	20,6 kg 45.4 lbs.
	Transport case *	795 x 290 x 415 mm 31.3 x 11.4 x 16.3 in	10,1 kg 22.3 lbs.
BLU360V (without acc.)	Instrument	730 x 221 x 355 mm 28.7 x 8.7 x 14 in	20,6 kg 45.4 lbs.
	Transport case *	795 x 290 x 415 mm 31.3 x 11.4 x 16.3 in	10,1 kg 22.3 lbs.

* Included instrument transport case

** Optional instrument transport case

Measurement

Internal voltage measurement

Model	Range **	Resolution
BLU100L	0 – 300 V DC	0,1 V or better*
BLU100A	0 – 300 V DC	0,1 V or better*
BLU200A	0 – 300 V DC	0,1 V (0,002 V up to 60 V, 0,02 V up to 300 V)*
BLU340A	0 – 300 V DC	0,1 V or better*
BLU360V	0 – 500 V DC	0,1 V or better*

* Optionally / provided on request

** Range is set automatically at start of test

- Typical accuracy: $\pm 0,5\%$ of reading $\pm 0,1$ V

Internal current measurement

Model	Range	Resolution
BLU100L	0 – 300 A DC	0,1 A
BLU100A	0 – 300 A DC	0,1 A
BLU200A	0 – 300 A DC	0,1 A
BLU340A	0 – 300 A DC	0,1 A
BLU360V	0 – 300 A DC	0,1 A

- Display range: 0 – 2 999,9 A DC
- Basic accuracy: $\pm (0,5 \% \text{ of reading} + 0,1 \text{ A})$
- Resolution: 0,1 A

Time measurement

- Typical accuracy:
 $\pm 0,01 \% \text{ of reading} \pm 1 \text{ digit}$

Input for current probe

- Range: 0 – 1 V DC
- mV/A ratio: Software settable values:
0,3 to 100 mV/A
- Input impedance: $> 1 \text{ M}\Omega$

Load section

Model	Battery Voltage
BLU100L	3,0* – 300 V DC
BLU100A	5,25* – 300 V DC
BLU200A	5,25* – 300 V DC
BLU340A	5,25* – 300 V DC
BLU360V	5,25* – 500 V DC

*Total discharge down to 0 V available with ZVD module

- Power: 28.4 kW (max)
- Discharge modes:
Constant current / power / resistance;
current, power or resistance profile mode

Constant current (Const I)

Model	Range
BLU100L	0 – 160 A DC (14,2 kW)*
BLU100A	0 – 160 A DC (14,2 kW)*
BLU200A	0 – 240 A DC (19,7 kW)*
BLU340A	0 – 160 A DC (28,4 kW)*
BLU360V	0 – 160 A DC (28,4 kW)*
ZVD module	0 – 60 A

* Maximum discharge power

- Typical accuracy: $\pm (0,5 \% \text{ of reading} + 0,2 \text{ A})$
- Ripple: max 0,4 A peak
- Resolution: 0,1 A

Constant resistance (Const R)

Model	Resistance
BLU100L	0,1 – 300 Ω
BLU100A	0,2 – 300 Ω
BLU200A	0,2 – 300 Ω (0,2 – 3000 Ω)*
BLU340A	0,2 – 300 Ω
BLU360V	$\leq 200 \text{ m}\Omega$ – 500 Ω

* Optionally / provided on request

- Typical accuracy: $\pm 1\%$
- Resolution: up to 0,01 Ω

Warranty

- 3 years + additional 1 (one) year upon registration on DV Power official website (www.dv-power.com)

Constant power (Const P)


Model	Range	Resolution
BLU100L	0 – 14,2 kW*	0,01 kW
BLU100A	0 – 14,2 kW*	0,01 kW
BLU200A	0 – 19,7 kW**	0,01 kW
BLU340A	0 – 28,4 kW*	0,01 kW
BLU360V	0 – 28,4 kW**	0,01 kW

- Typical accuracy: $\pm 1\%$
- Ripple: max 0,2 kW


* Discharge power range settable on a single unit

** For BLU200A and BLU360V models, maximum power derates at temperatures over $+35^{\circ}\text{C}$ ($+95^{\circ}\text{F}$).

Current / voltage diagram for the BLU200A model at $+35^{\circ}\text{C}$ ($+95^{\circ}\text{F}$) and $+50^{\circ}\text{C}$ ($+122^{\circ}\text{F}$) is presented below.

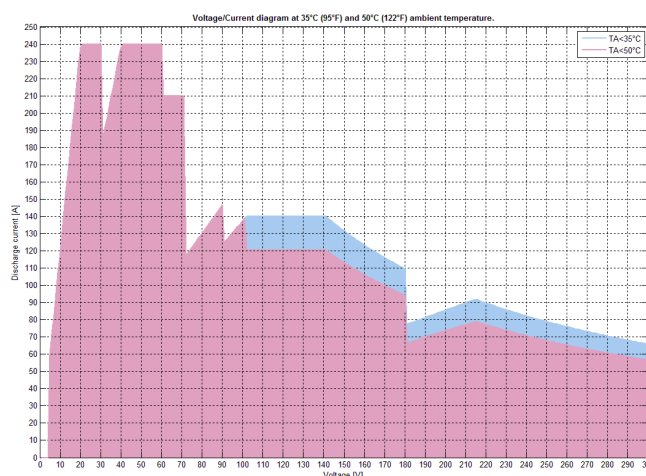

Current / voltage diagram for the BLU360V model at $+35^{\circ}\text{C}$ ($+95^{\circ}\text{F}$) and $+50^{\circ}\text{C}$ ($+122^{\circ}\text{F}$) is presented below.

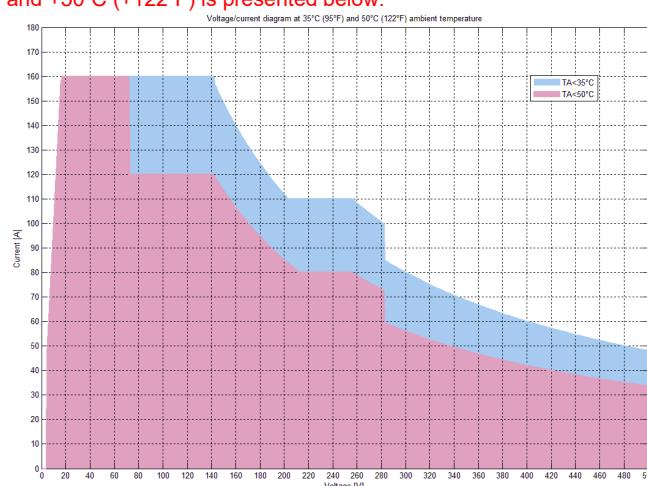

Display

Size

- 4,3 inch color touch screen display

Range / Resolution

- Current: 0 – 2 999,9 A DC / 0,1 A
- Voltage: 0 – 999,9 V DC / 0,1 V
- Capacity: 0 – 9999,9999 Ah / 0,0001 Ah
- Time: 00h:00m:00s - 23h:59m:59s / 1 sec

STOP parameters

- End voltage (total battery or per-cell voltage)
- Capacity
- Test time

Environment conditions

- Operating temperature:
-20 °C to +55 °C / -4 °F to +131 °F
- Storage & Transportation temperature:
-40 °C to +70 °C / -40 °F to +158 °F
- Relative humidity: up to 95%, non-condensing
- Pollution degree: 2

Shock/Vibration/Fall

- Instrument: ETSI EN 300 019-2-7 class 7M2
- Instrument in transport case: ISTA 2A

Communication with PC

- USB
- RS232 (optional)

Protection

- Thermal cut-outs and automatic overload protection
- Emergency Stop button
- Overcurrent, overheat and overvoltage protection

Available languages

- English, German, French, Spanish

Current probe specifications

Current probe	Ranges	mV/A – ratio	Supply
Current clamp 30/300 A*	30 A	10 mV / A	From the instrument
	300 A	1 mV / A	

* current clamps 1000 A can be provided on request.

Encapsulation class / Ingress protections

- IP20

Applicable Standards

- IEEE 450-2010, IEEE 1188-2005, IEEE 1106-2015, IEC 60896-11, IEC 60896-22 and other relevant standards
- Safety
 - Low Voltage Directive:
Directive 2014/35/EU (CE conform)
- Applicable standards, for a class I instrument, pollution degree 2, Installation category II: IEC EN 61010-1
- Electromagnetic Compatibility:
 - Directive 2014/30/EU (CE conform)
Applicable standard: EN 61326-1
- CAN/CSA-C22.2 No. 61010-1

All specifications herein are valid at ambient temperature of + 25 °C /+ 77°F and standard accessories.
Specifications are subject to change without notice.

Accessories



Current cables



Extension cables



Sense cables with dolphin clips



Transport case



Canvas trans. case



Current clamp 30/300 A



Cable bag



Cable set for BLU-BXL simultaneous triggering



Cable for BLU-BLU parallel operation



Cable for external alarm

Order Info

Instrument	Article No
Battery Load Unit BLU100L	BLU100A-N-00
Battery Load Unit BLU100A	BLU100L-N-00
Battery Load Unit BLU200A	BLU200A-N-00
Battery Load Unit BLU340A	BLU340A-N-00
Battery Load Unit BLU360V	BLU360V-N-00

Included Accessories	Article No
Windows based DV-B Win PC software including USB cable	
Mains Power cable	MPCXXA-XX-00
Ground (PE) cable	CABLE-GND-00
Transport case for BLU - small size (for BLU100L & BLU100A models)	HARD-CASE-B0
Transport case for BLU – medium size (for BLU200A models)	HARD-CASE-BL
Transport case for BLU – large size (for BLU340A and BLU360V models)	HARD-CASE-B1

Standard	Article No
Current cables 2 x 3 m 35 mm ² (9.84 ft, 2 AWG) with alligator clamps (A4) isolated (for BLU100L, BLU100A, BLU340A and BLU360V models)	C2-03-35VA4I
Current cables 2 x 3 m 50 mm ² (9.84 ft, 0 AWG) with alligator clamps (A4) isolated (for BLU200A model)	C2-03-50VA4I
Cable bag	CABLE-BAG-00

Optional	Article No
Zero Voltage Discharge Module ZVD	BLU-ZVDMxx-0
Battery External Load Unit BXL-A	BXL400X-A-00
Battery External Load Unit BXL-T	BXL400X-T-00
Battery External Load Unit BXL-V	BXL400X-V-00
Cable set 2 x 2 m 1 mm ² (6.56 ft, 17 AWG) for BLU-BXL simultaneous triggering (for BXL models)	PO-02-01BPBP
Battery Voltage recorder BVR11 with accessories	BVR11X-NN-00
Battery Voltage recorder BVR22 with accessories	BVR22X-NN-00
Current cables 2 x 3 m 50 mm ² (9.84 ft, 0 AWG) with alligator clamps (A4) isolated (for BLU100L, BLU100A, BLU200A, BLU340A, BLU360V, BXL-A and BXL-V models)	C2-03-50VA4I
Current cables 2 x 5 m 35 mm ² (16.4 ft, 2 AWG) with alligator clamps (A4) isolated (for BLU100L, BLU100A, BLU340A, BLU360V, BXL-A and BXL-V models)	C2-05-35VA4I
Current cables 2 x 5 m 50 mm ² (16.4 ft, 0 AWG) with alligator clamps (A4) isolated (for BLU100L, BLU100A, BLU200A, BLU340A, BLU360V, BXL-A and BXL-V models)	C2-05-50VA4I
Current cables 2 x 5 m 70 mm ² (16.4 ft, 00 AWG) with alligator clamps	C2-05-70FA4I

(A4) isolated (for BXL-T model)	
Extension cables 2 x 5 m 35 mm ² (16.4 ft, 2 AWG) (for BLU100L, BLU100A, BLU340A, BLU360V and BXL models)	E2-05-35VA3I
Extension cables 2 x 5 m 70 mm ² (16.4 ft, 00 AWG) (for BXL-T model)	E2-05-70VFMI
Sense cables 2 x 3 m (9.84 ft) with banana plugs + dolphin clip (for BLU models)	S2-03-00BPDC
Sense cables 2 x 5 m (16.4 ft) with banana plugs + dolphin clip (for BLU models)	S2-05-00BPDC
Current clamp 30/300 A power supplied from the instrument with extension 5 m (16.4 ft) (for BLU models)	CACL-0300-06
Cable for external alarm (for BLU models)	CABLE-EXA-05
Extension cable for external alarm 5 m (16.4 ft) (for BLU models)	E1-EXABLU-05
Cable for BLU-BLU parallel operation 3 m (9.84 ft) (for BLU200A, BLU340A and BLU360V models)	CP-03RJ45-00
Cable set 2 x 5 m 1 mm ² (16.4 ft, 17 AWG) for BLU-BXL simultaneous triggering (for BXL models)	PO-05-01BPBP
Canvas transport case – small size (for BLU100L and BLU100A models)	HARD-CASE-B2
Canvas transport case – medium size (for BLU200A model)	HARD-CASE-B3

Order Examples

BLU200A with standard accessories

Instrument with Included Accessories	Quantity	Article No
Battery Load Unit BLU200A	1 set	BLU200A-N-00
- Mains power cable		
- USB with DV-B Win PC software		
- USB cable		
- Ground (PE) cable		
- Transport case		
Standard Accessories		
Current cables 2 x 3 m 50 mm ² (9.84 ft, 0 AWG) with alligator clamps (A4) isolated	1 set	C2-03-50VA4I
Cable bag	1 pc	CABLE-BAG-00

BLU340A + BXL-A with standard accessories

Instruments with Included Accessories	Quantity	Article No
Battery Load Unit BLU340A	1 pc	BLU340A-N-00
Battery Extra Load Unit BXL-A	1 pc	BXL400X-A-00
- USB with DV-B Win PC software	1 pc	
- USB cable	1 pc	
- Mains power cable	2 pcs	
- Ground (PE) cable	2 pcs	
- Transport case	2 pcs	
Standard Accessories		
Current cables 2 x 3 m 35 mm ² (9.84 ft, 2 AWG) with alligator clamps (A4) isolated	2 sets	C2-03-35VA4I
Cable bag	2 pcs	CABLE-BAG-00
Current clamp 30/300 A power supplied from the instrument with extension 5 m (16.4 ft)	1 pc	CACL-0300-06

2 x BLU360V with standard accessories

Instruments with Included Accessories	Quantity	Article No
Battery Load Unit BLU360V	2 sets	BLU360V-N-00
- Mains power cable		
- USB with DV-B Win PC software		
- USB cable		
- Ground (PE) cable		
- Transport case		
Standard Accessories		
Current cables 2 x 3 m 35 mm ² (9.84 ft, 2 AWG) with alligator clamps (A4) isolated	2 sets	C2-03-35VA4I
Cable bag	2 pcs	CABLE-BAG-00
Cable for BLU-BLU parallel operation 3 m (9.84 ft)	1 pc	CP-03RJ45-00